



ELECTRIC
CLAMP MULTIMETER

=

LARGE JAW DESIGN/FLASHLIGHT

36mm large tension clamp head, long press H/-☆-to turn on the flashlight, no fear of dark environment









AC CURRENT

Automatic measurement by clamping the wire with the pliers





CM80

- 1) Plier head
- ②Plier head trigger
- ③NCV indicator
- ④H/☆value hold/screen backlight:

Short press this key: the value is maintained or canceled;

Press and hold this key for about 2 seconds: the screen backlight and lighting are turned on or off.

- 5 SELECT function selection key: short press this key to select NCV mode, press it again to exit.
- ⑥ Power button: Short press this button to turn on the power, the default is to enter the voltage, resistance, and current automatic identification AUTO mode (if you need to use other functions, please press the function button to select)

Press and hold the power button for about 2 seconds to turn off the unit.

- 7LCD screen
- ® COM: Negative terminal of measurement signal terminal.









65mm/2.56in

32mm/1.26in

