 


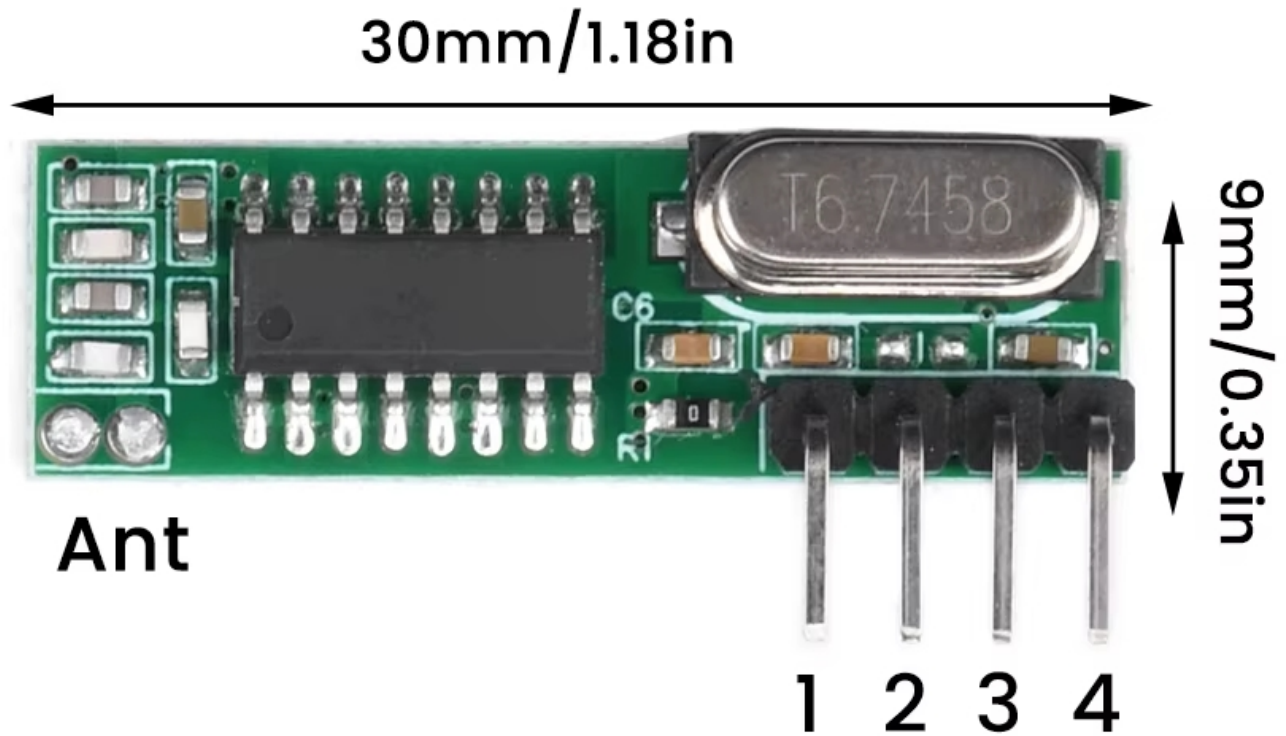



Pin Functions

ANT-Antenna pin

1.VCC-Power input pin 2.DO-Data output pin

  3.DO-data output pin 4.GND-power ground pin

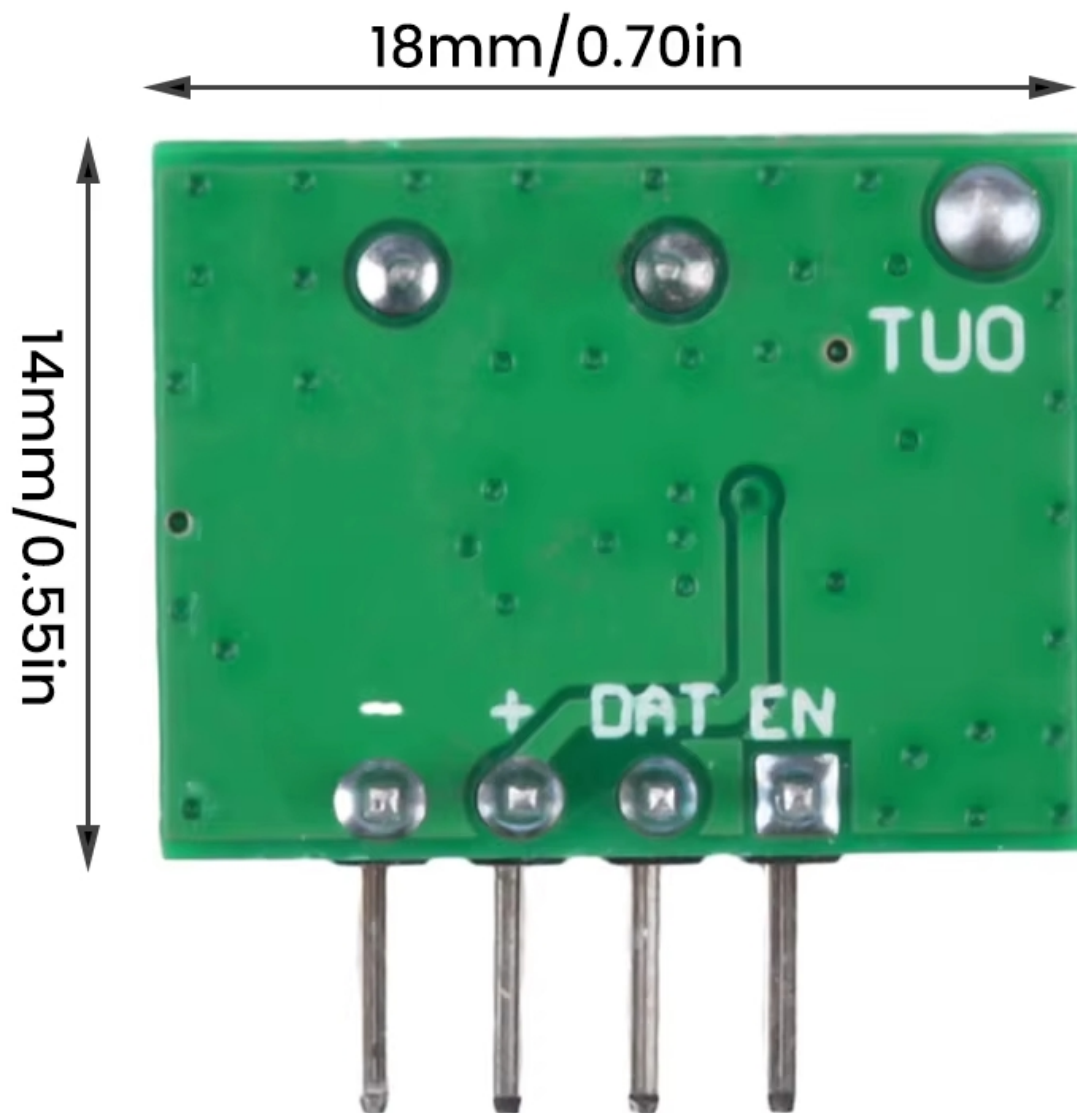

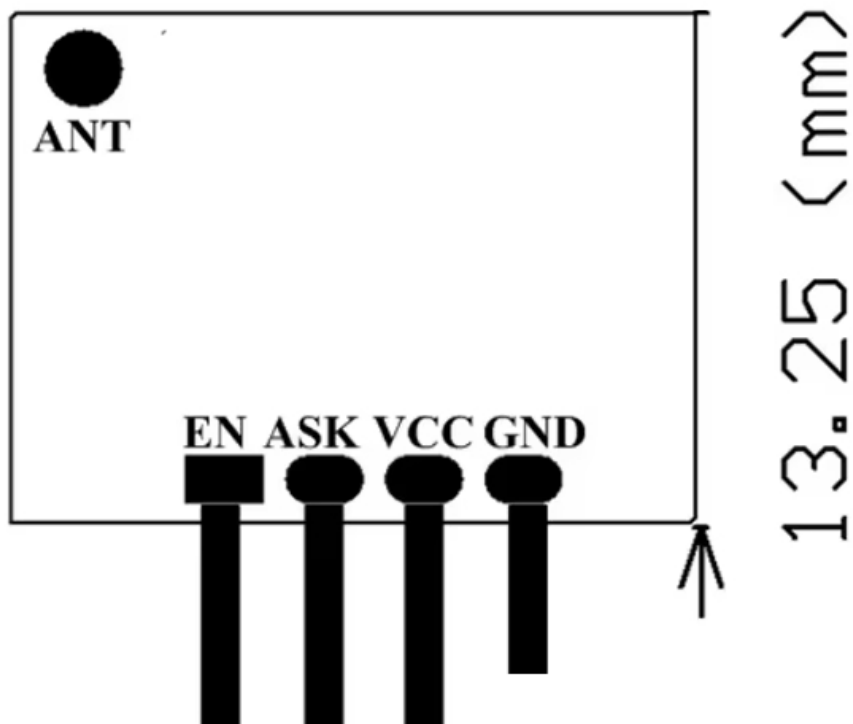

Pin Number	Name	Symbol	Instruction
1.	ANT	Antenna Pin	RF signal input for direct connection to antenna
2.	GND	Power Ground Pin	Power ground, can be connected to antenna housing shield
3.	EN	Work Enable Pin	EN high, module works; EN low, module sleeps
4.	ASK	Data input pin	Waveform signal input
5.	VCC	Power supply pin	Power Input
6.	GND	Power Ground Pin	Power ground

